




USER MANUAL

JET CLEANER

MODELS : FJP-500

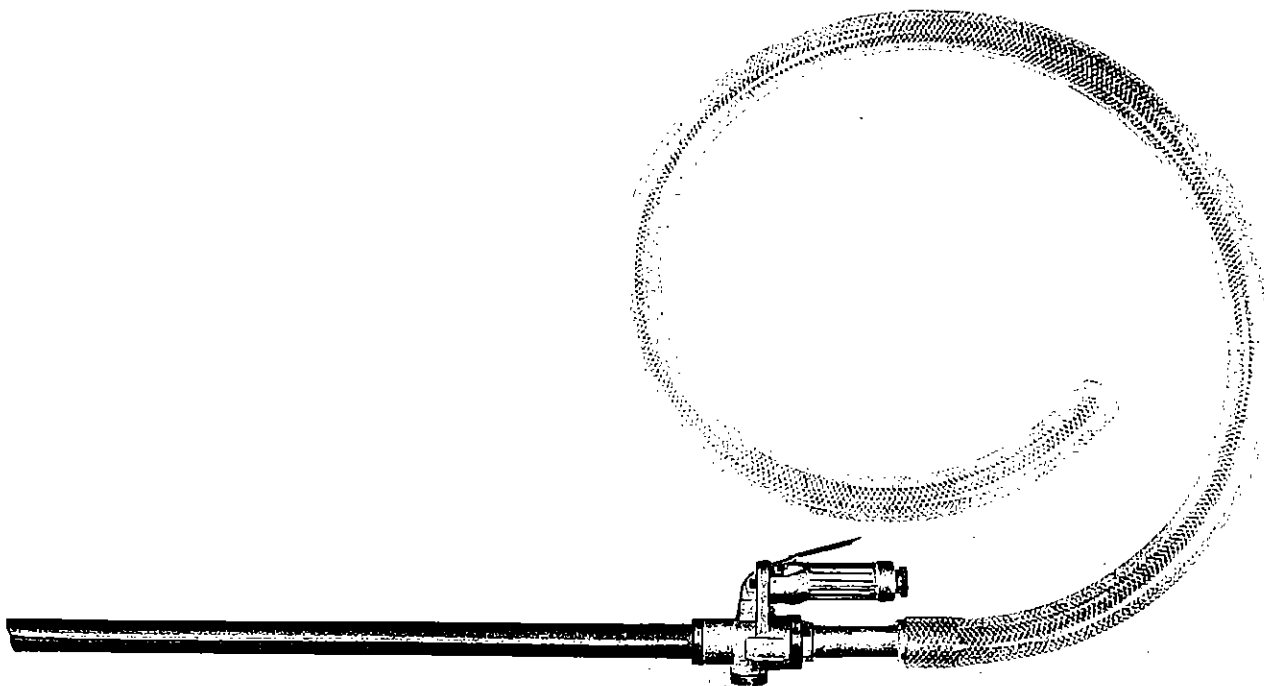

FJP-500

SPECIFICATIONS

Model	Vacuum Degree (about)		Overall Length (about)		Outside Dia. For Discharge	Weight (about)		Max. Air Consumption (about)		Air Inlet Thread Size	Air Hose Size	
	mm Hg	in Hg	mm	in		kg	lb	m ³ /min	ft ³ /min		mm	in
FJP-500	200	7 7/8	1,020	41 11/32	38	1.5	3.3	1.10	38.8	3/8	9.5	3/8




Refer to instructions and warning for safety use enclosed in each tool box.

FUJI AIR TOOLS CO., LTD.

1-14, Kamiji 2-chome, Higashinari-ku, Osaka, 537 Japan


Tel : (06) 972-2335

Fax : (06) 972-2250

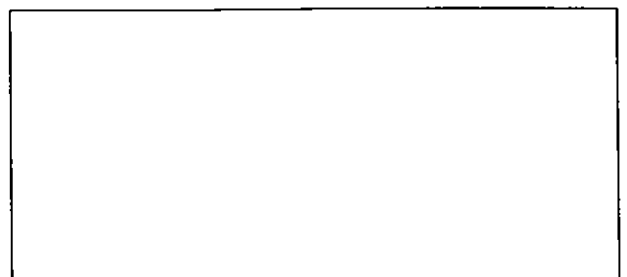

PARTS LIST MODEL : FJP-500

EXPLODED VIEW

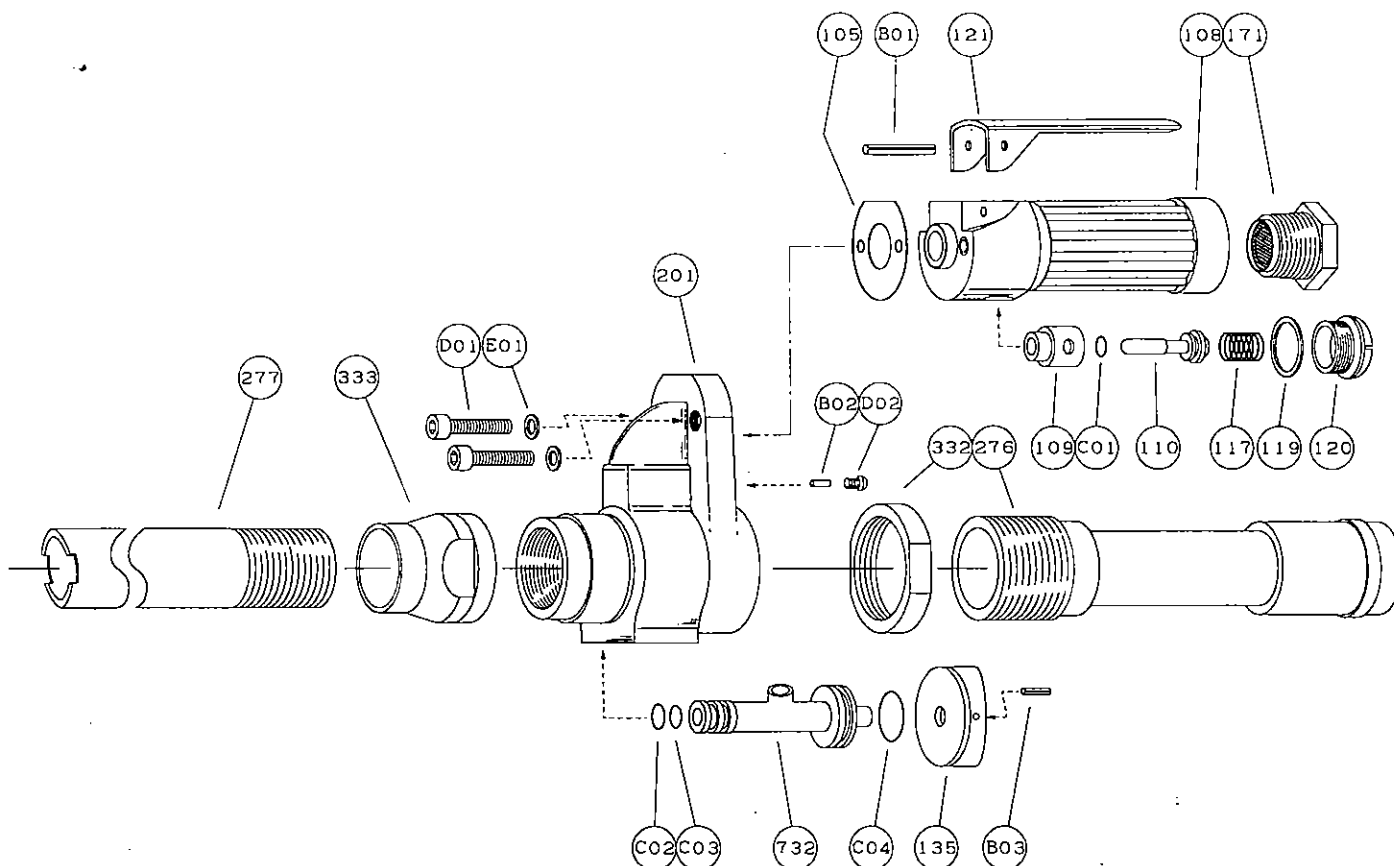

FJP-500

PARTS LIST

Index No.	Parts No.	Parts Name	Qt.	Index No.	Parts No.	Parts Name	Qt.
FJP-500				276	S-047276-00	Diffuser	1
CP No.	S-047003-00	Throttle Valve Body CP		277	S-047277-00	Suction Tube	1
108	S-047108-00	Throttle Valve Body	1	332	S-047332-00	Lock Nut (A)	1
109	G-057109-00	Throttle Valve Bushing	1	333	S-047333-00	Lock Nut (B)	1
110	G-057110-00	Throttle Valve	1	732	S-047732-00	Nozzle	1
117	G-057117-00	Throttle Valve Spring	1	B02	NR-2.58	Needle Roller	1
119	D-005119-00	T.V. Cover Packing	1	B03	SP-2.512	Spring Pin	1
120	G-057120-00	Throttle Valve Cover	1	C02	O-P10	"O" Ring	1
121	G-057121-00	Throttle Valve Lever	1	C03	O-P9	"O" Ring	1
171	IB-6N3OS0	Inlet Bushing (PT)	1	C04	O-P20	"O" Ring	1
171	IB-6N3NS0	Inlet Bushing (NPT)	1	D01	CS-625	Cap Screw	2
B01	SP-432	Spring Pin	1	D02	S-46RS	Screw	1
C01	O-P8	"O" Ring	1	E01	SW-6	Spring Washer	2
105	G-057105-00	Housing Cover Packing	1	☐ CP No. denotes the assembled parts comprising of more than 1 pc. of parts. The related parts are shown in the thick frame.			
135	S-047135-00	Reverse Valve Lever	1	☐ Specify parts number and quantity in ordering.			
201	S-047201-00	Housing	1	☒ Standard Accessory : F-705-----5mm Hex. Pin Wrench 1.			